

Radio Communications for Everyday or Emergency Use





PORTABLE RADIO POD OPERATIONS






OES Radio Pod





Power cords: AC or DC

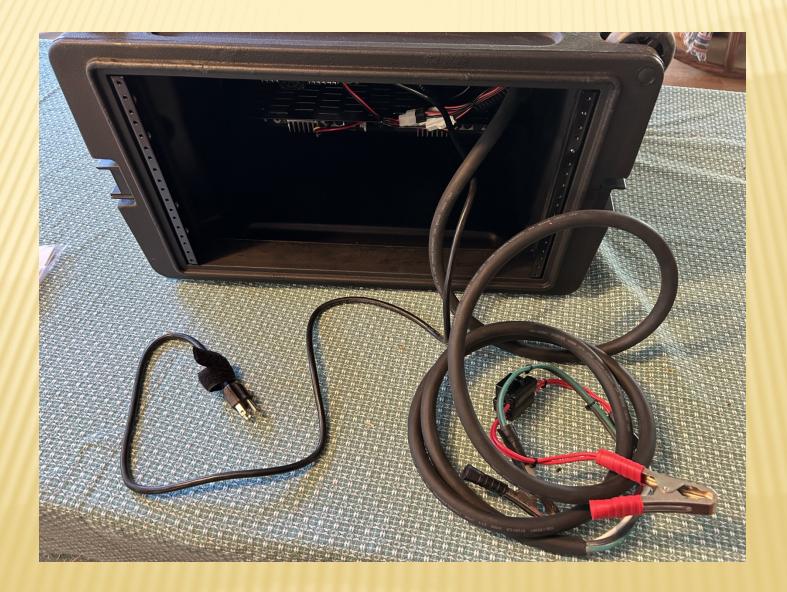

3 Radios:

VHF Commercial UHF Commercial Dual Band Ham Radio



Kenwood NX-500 VHF and UHF

Similar use channels are grouped in channel banks called ZONES




ZONES

Press "ZONE+" or "ZONE-" to advance to the next zone




ZONES – Kenwood VHF

- 9 Zones:
- 1. Law
- 2. Tactical
- 3. SAR
- 4. Fire
- 5. MURS
- 6. Weather
- 7. Federal
 8. Public Works
 9. Ham radio

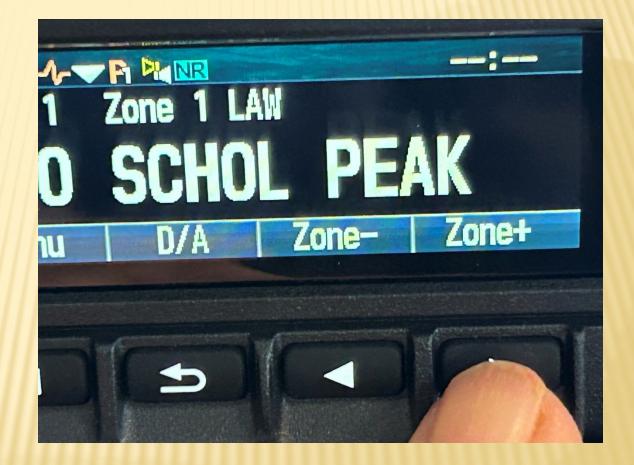

ZONES – Kenwood UHF

3 Zones:
 1. Tactical
 2. Law Tacs
 3. Ham radio

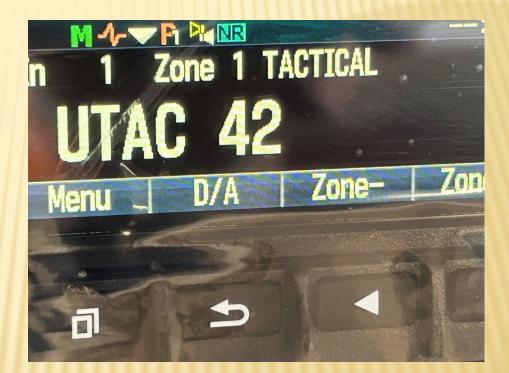

POWER SETTINGS

High = 45 watt Mid = 20 watt Low = 5 watt

If using with a portable antenna near others, use a lower setting

MENU – Power Level

1. Select Menu button




- 2. Arrow keys to POWER icon then press NEXT to select power levels
- 3. Scroll to display levels, use NEXT to select





SCAN

1. Two chevrons indicate channel is on the scan list. 2. Use the D/A button to Delete/Add the channel to the list. **3. Press the orange** button to scan.

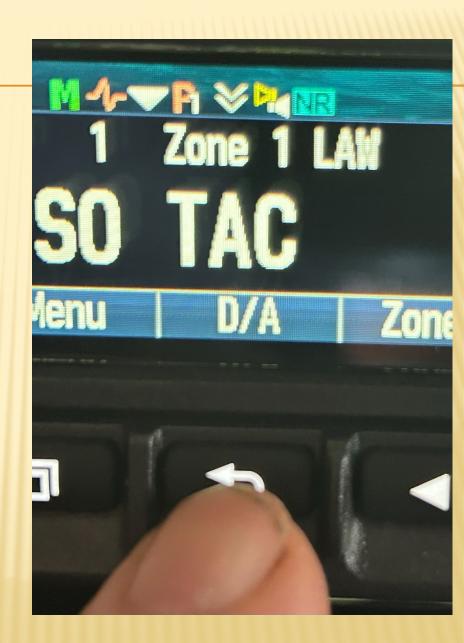

SCAN

- Any number of channels on any zone can be added to the scan list.
- The channel that is currently selected is the priority channel.



Kenwood NX-500 Errors

- BLM frequency is incorrect. Disregard this channel.
- UCAL 40D is showing up as UCAL 45D on the display. The programed frequency is correct, so use "45D" for 40D.

POD Antennas

- Separate box of antennas for the pod radios
- Foldable metal ground plane metal plates for mag mount antennas





POD Antennas

VHF, UHF & Dual Band Mag Mount antennas





- Dual Band
- Dual Display



- To switch from left to right side displays, short press the corresponding "MAIN" button
- "MAIN" appears in the active (TX) side of the radio



To switch between VFO and memory channels, short press the "V/MHZ" or "MR" buttons



Operators manual is inside the radio pod



Pelican Case Radio





YEASU FT-8800

- Dual band radio
- 12 volt lithium battery
- Various power cables
- 120 volt power supply
- Battery meter
- Battery charger
- Owner's manual
- And a bonus accessory



DC or AC POWER SOURCE



SELECT POWER SOURCE

1. 12 VOLT DC OR 120 VOLT AC 2. 12 VOLT:

1) Internal battery or 2) Outside 12 VDC source



12 VOLT POWER CORDS

- Power Pole to ASE plug
- ASE to cigarette lighter plug
- ASE to battery terminals
 - ASE to battery clips



ATTACH ANTENNA



INTERNAL BATTERY CHARGING

- On AC power, select battery charge switch.
- Push button to check battery voltage.
 Green light comes charged.



BONUS!

Plug for charging your cell phone!



QUESTIONS?

